


**Protective sliders**  
**SUZUKI GSF 650/1250 Bandit**


Year of production: '05-'07

Product code: 10323

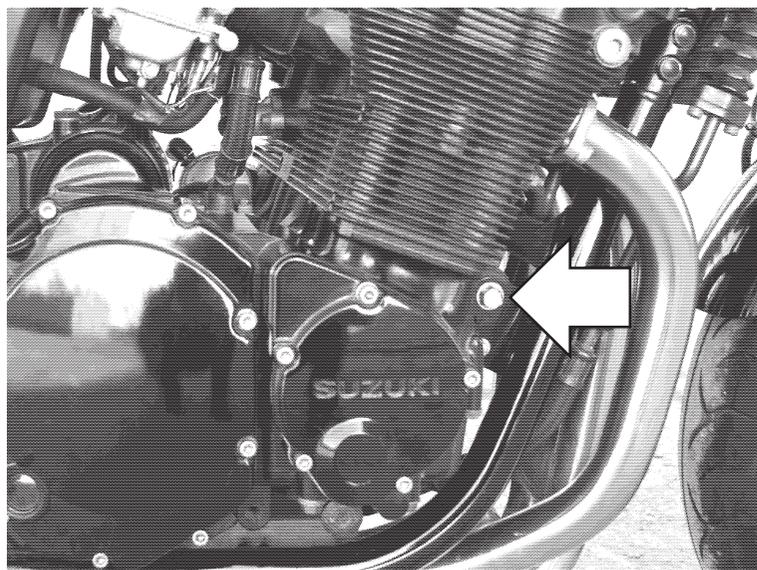

Assembly position  
 (Left and right sides)

Assembly scheme (both sides)

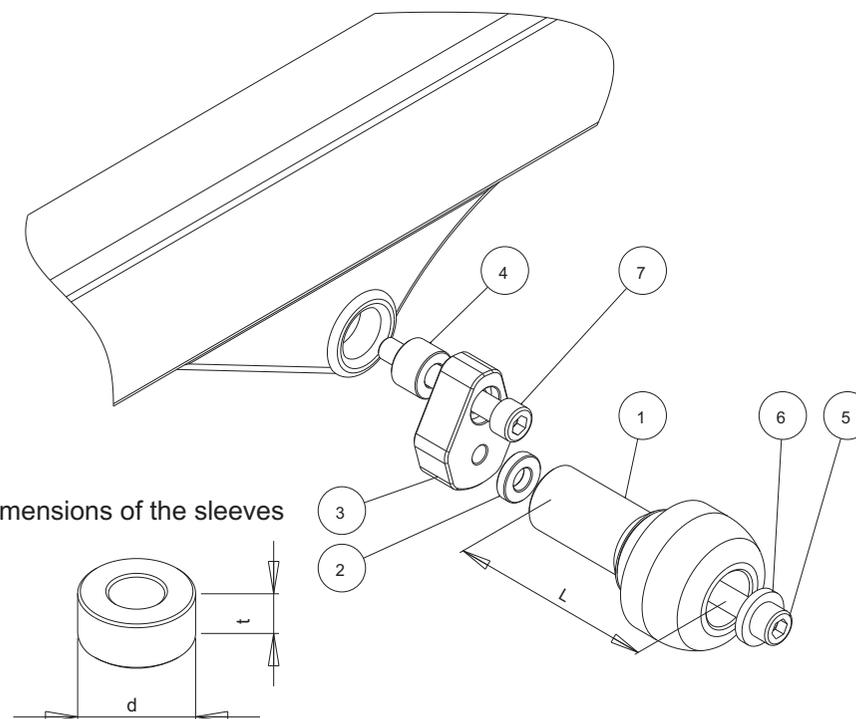

**Assembly instructions**

1. Remove the screws indicated with the arrows.
2. Replace the removed screws by the new screws (parts #7) and metal bars (parts #3) according to the attached drawing. Put the metal parts (parts #3) in the right positions according to the drawing.
3. Assemble the sliders and the screws according to the drawing (parts #1, #2, #6, #5).
4. Assemble the screws #5 and the sliders with the metal bars #3.

We suggest to use the threadlocker to make sure that the screws do not get loose.

No	Part	Left side	Right Side
1	Slider	L = 105 mm	L = 105 mm
2	Sleeve	d=20 mm, t=5 mm	d=20 mm, t=5 mm
3	Metal bar		
4	Sleeve	d=30 mm, t=55 mm	d=30 mm, t=25 mm
5	Screw	M10	M10
6	Washer		
7	Main screw	M10, L = 120 mm	M10, L = 90 mm

This product is entirely produced in the European Union. This product is a professional accessory to be used on the race track. Renner LTD takes no responsibility for any damages occurred despite of using protective accessories. For more information go to [www.renner-moto.com](http://www.renner-moto.com)