




**Protective sliders
YAMAHA XJ6 F**

Year of production: ALL
Product code: 10427

Assembly scheme (both sides)

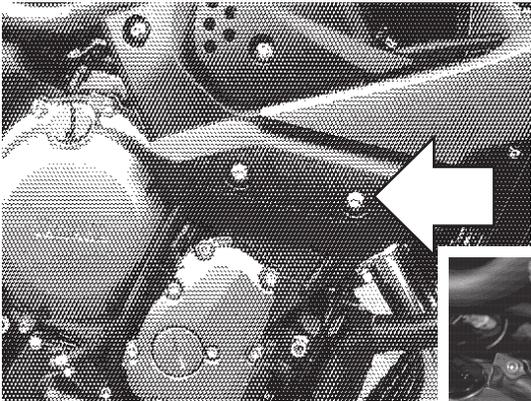

Assembly positions.
Left and right sides

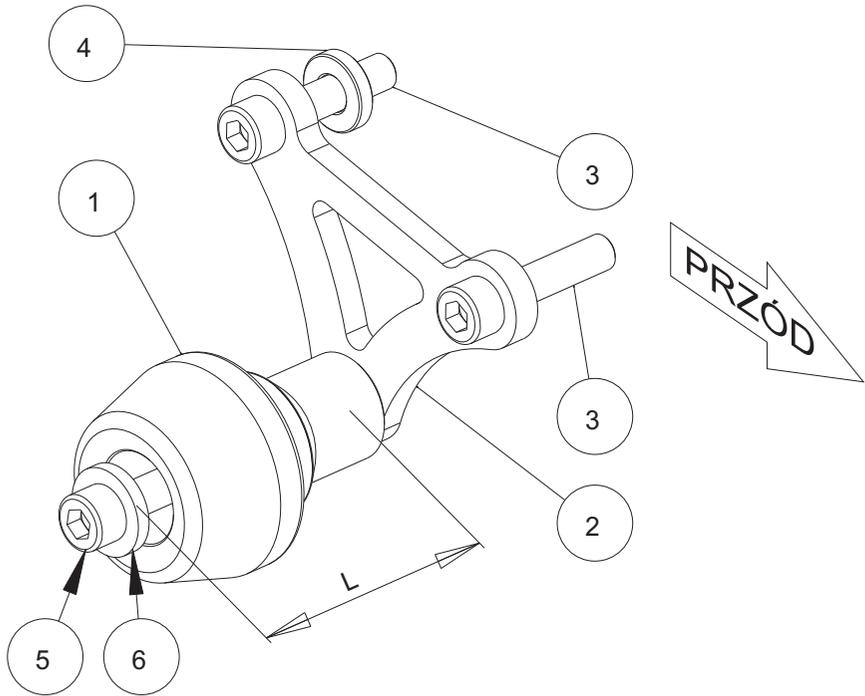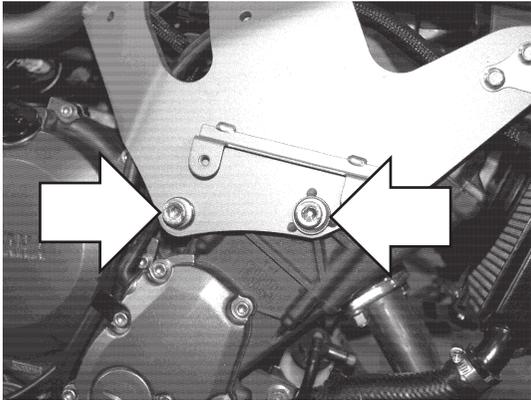

Assembly instructions

1. Remove the fairings.
2. Remove the engine screws indicated with the arrows.
2. Replace the removed screws by the new screws (parts #3) and metal bars (parts #2) according to the attached drawing. Put the metal parts (parts #2) in the right positions according to the drawing.
3. Mark the place to drill the hole in the fairings. The appropriate places are in front of the threaded hole in the metal bar (part # 2). We suggest to drill a small hole at first.
4. Assemble the fairings.
5. Assemble the sliders and the screws according to the drawing (parts #1, #6, #5).
4. Assemble the screws #5 and the sliders with the metal bars #2.

We suggest to use the threadlocker to make sure that the screws do not get loose.

No	Part	Left side	Right side
1	Slider	L = 105 mm	L = 80 mm
2	Metal bar	Smaller	Bigger
3	Main screw	M10	M10
4	Sleeve	x	
5	Screw	M10	M10
6	Washer		

This product is entirely produced in the European Union. This product is a professional accessory to be used on the race track. Renner LTD takes no responsibility for any damages occurred despite of using protective accessories. For more information go to www.renner-moto.com