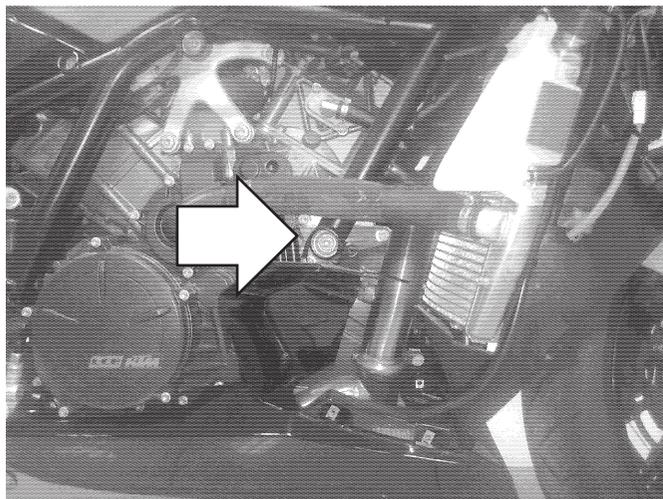


Assembly scheme (both sides)

Protective sliders KTM RC 8
Year of production: ALL Product code: 10803

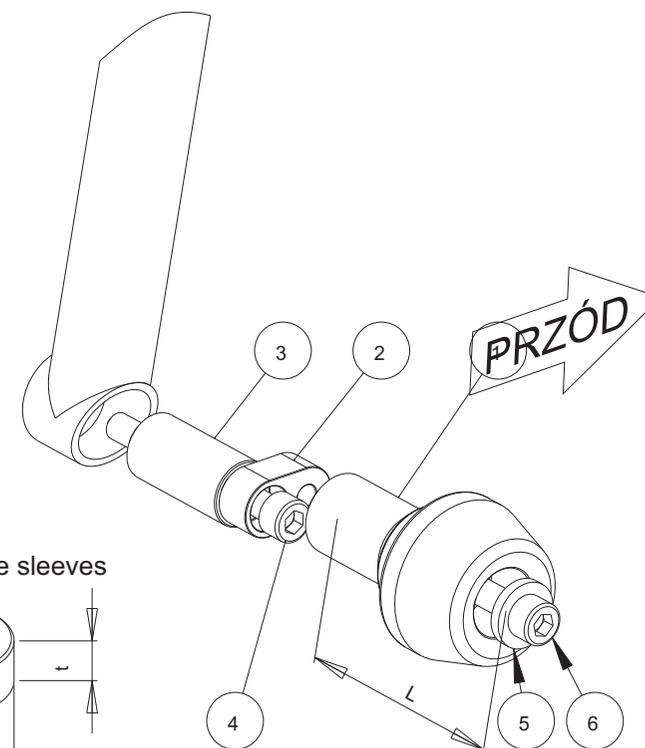
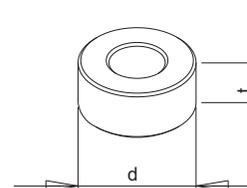

 Assembly positions.
 Left and right sides

Assembly instructions

1. Remove the fairings.
 2. Remove the screws indicated with the arrows and remove aluminium washers.
 3. Replace the removed screws and washers with the new screws (parts #4), aluminium sleeves (parts #3) and metal bars (parts #2) according to the attached drawing. Put the metal bars (parts #2) to the right positions according to the drawing.
 4. Mark the positions of the holes on the fairings. The correct positions are opposite the threaded holes in the metal parts #2.
 5. Drill the holes in the fairings. We suggest to drill small holes first (eg. 0,20" in diameter). Then check if the holes are in correct positions by putting the fairings on.
 6. If the positions of the holes are correct, assemble the fairings.
 7. Assemble the sliders, the screws and the washers (parts #1, #5 and #6) according to the drawing. Put them into the second holes in part #2.
- We suggest to use the threadlocker to make sure that the screws do not get loose.

This product is entirely produced in the European Union. This product is A professional accessory to be used on the race track. Renner LTD takes no responsibility for any damages occurred despite of using protective accessories. For more information go to www.renner-moto.com

Dimensions of the sleeves



No	Part	Left Side	Right Side
1	Slider	L = 95 mm	L = 95 mm
2	Metal Bar		
3	Sleeve		
4	Main screw	M10 (10,9)	M10 (10,9)
5	Washer		
6	Screw	M10 (8,8)	M10 (8,8)